

MANUA NSTRUCTION

CAPCOM, USA INC.

Invites You To Use

OUR TOLL FREE NUMBER FOR SERVICE INFORMATION CONCERNING THIS GAME, OR ANY OTHER CAPCOM GAME YOU NOW HAVE ON LOCATION.

> CALL US FOR PROMPT, COURTEOUS ANSWERS TO YOUR PROBLEMS.

Continental U.S.

(800) 843-4632

California Only (408) 745-7081

FAX

(408) 745-7920

WARRANTY, REPAIR AND RETURN POLICY

- 1. *90 DAY FULL PARTS WARRANTY.
- 2. *90 DAY FULL ELECTRONICS WARRANTY (SEE RMA BELOW).
- 3. MINIMUM \$40.00 SERVICE CHARGE FOR ALL NON-WARRANTY REPAIRS OR RETURNS.
- 4. **ANY** UNAUTHORIZED NON-FACTORY REPAIR OR ATTEMPTED REPAIR VOIDS WARRANTY.

(*ALL WARRANTY PERIODS BEGIN ON THE DATE OF PURCHASE FROM CAPCOM)

RETURN MERCHANDISE AUTHORIZATION — (RMA)

- ALL RETURNED MERCHANDISE MUST HAVE AN RMA NUMBER CLEARLY VISIBLE ON THE OUTSIDE OF THE PACKAGE.
- 2. ALL RMA NUMBERS MUST BE OBTAINED FROM CAPCOM BY AN AUTHORIZED CAPCOM DISTRIBUTOR. (PLEASE HAVE CAPCOM SERIAL NUMBER AVAILABLE WHEN CALLING FOR AN RMA #).
- 3. ALL PC BOARDS RETURNED TO CAPCOM WITHOUT AN RMA NUMBER WILL NOT BE ACCEPTED.
- 4. ROMSTAR WILL SHIP ADVANCE REPLACEMENT BOARDS TO DISTRIBUTORS OR AT DISTRIBUTORS REQUEST, DROP-SHIP BOARDS DIRECT TO THE OPERATOR.
- 5. ADVANCE REPLACEMENT BOARDS WILL BE BILLED TO THE DISTRIBUTOR UNTIL RECEIPT OF A RETURNED BOARD BY ROMSTAR AT WHICH TIME A CREDIT WILL BE ISSUED.
- 6. ALL REPAIRS AND/OR REPLACEMENTS WILL BE SHIPPED BY CAPCOM WITHIN 24 HOURS OF RECEIPT OR REQUEST. (SUBJECT TO AVAILABILITY OF BOARDS).
- 7. FOR ANY ROMSTAR PRODUCT PURCHASED AFTER 11/1/87, A CAPCOM WARRANTY CARD MUST BE ON FILE FOR EACH BOARD TO FACILITATE REPAIR & RETURN.

Before You Get Started...Stop!

- 1. Does your **new game** package include all listed parts? (Is it complete?)
- 2. Is the game you have chosen to transform able to supply all the required voltages for the **new game**?
 - **Note:** Some games, (i.e. Ms. Pac Man, Galaxian, etc.) regulate their voltages on the main P.C.B. This makes the existing power supply inefficient. These games will require a change in power supply for your **new game**. Many game supply houses can offer you a switching regulated power supply for a relatively low cost.
- Is the monitor configuration compatible? In most games it is rather difficult to change the monitor from a vertical mount to a horizontal mount. We recommend you choose a game cabinet with the same mount as your **new game** requires.
- 4. Do you have the necessary tools? (See the recommended tool list)

Caution

F.C.C. Regulation Compliance

The P.C. board cage supplied with this new game kit must be utilized and terminated to ground at the time of installation.

This is to avoid radio frequency radiation and comply with the limits for a class "A" computing device pursuant to sub-part "J" of part 15 of F.C.C. rules, which are designed to provide reasonable protection against interference when operated in a commercial environment.

Operation of this equipment iri a residential area is likely to cause interference—in which case, the user at his own expense, will be required to take whatever measures may be required to correct the interference.

Installing and Servicing Your



New Game Package

Table of Contents

| New Game Package Contents2 | |
|--------------------------------|---|
| Power and Monitor Requirements | |
| Recommended Tools and Supplies | |
| Dip Switch Tables | 4 |
| Game Description5 | |
| Installation Procedures6 | |
| Helpful Hints | |
| Control Panel Positioning | |
| Main Harness Connections | |
| Warranty Registration Card | |



NEW GAME PACKAGE CONTENTS

| 1 Main Printed Circuit Board (PCB) | 1 Marquee |
|------------------------------------|---|
| 1 PCB Cage (FCC Required) | 1 Control Panel Overlay |
| 1 Set Legs, Bolts, & Spacers | 1 Plex Control Cover |
| 1 Connecting Wire Harness | 1 Set Side Graphics |
| 2 Eight-Way Joystick | 1 Set Play Instructions & Function Labels |
| 6 Player Button Assemblies | 1 Service and Installation Manual |

Note: Replacement accessories available through your exclusive Capcom distributor.

| POWER REC | DUIREMENTS | MONITOR REQUIREMENTS |
|-----------|------------|----------------------------|
| +5 VDC | 5 amp | Vertical Mount Raster Scan |
| +12 VDC | 1 amp | Negative Composite Sync |

Recommended Tools and Supplies

CAPCOM new game package.

Phillips and Slot Screwdrivers

Socket Set

Enthusiastic Attitude

Wire Cutters and Strippers

Pliers or Channel Locks

Planning and Careful Thought

Electric Drill

3/32" • 1/4" • 7/16" Drill Bits

1/4" Plex Bit

1-3/16" Chassis or Sheet Metal Punch

1 1/4" Plex Hole Saw

Glass of Water and a Snack

Small File

Razor Knife and Sharp Blades

Straight Edge

Patience (

Common Sense

Painting Supplies (if you do your own painting)

Paint Brush and Paint (don't forget

the primer)

Paint Roller and Pan

Sand Paper

Putty Knife and Wood Putty

A Good Night's Sleep

Staple Gun and Staples

Soldering Iron and 60/40 Resin Core

Solder

Vacuum Cleaner

Assorted Fastening Hardware

Shrink Tubing: 3/32" • 1/8" • 3/16"

Masking Tape

3 1/2" OR 4" Wire Ties

Spray Window Cleaner and Rags (baby diapers work GREAT!)

Dip Switch Tables

Optimize Your Profits

Thorough Research shows that two and a half minute games both satisfy players and also keep the quarters flowing.

If games aren't running about two and a half minutes long, then collections probably aren't at their peak. You'll want to tailor your game to your location. The trick is to adjust a few DIP switches. (See the chart in this book.) It's easy!

DIP SWITCH SETTINGS - 1943

DIP - A


| ITEM | DESCRIPTION | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|--------------------------|--|-----------|------------------|------------------|-----------|--|--|--|--|
| TEST MODE | NORMAL TEST | OFF ON | | | | | | | |
| SCREEN STOP | NORMAL STOP | | OFF ON | | | | | | |
| UPRIGHT/TABLE CHANGE | UPRIGHT TABLE | | | OFF ON | | | | | |
| CREDITS FOR 2 PLAYERS | 2 CREDITS/2 PLAYERS 1 CREDIT/2 PLAYERS | | | | OFF ON | | | | |
| DIFFICULTY LEVEL | 1 EASY 2 3 4 5 6 7 8 NORMAL 9 10 11 12 13 14 15 16 DIFFICULT | | | | | OFF OFF OFF OFF OFF OFF ON ON ON ON ON | OFF OFF OFF ON ON ON OFF OFF OFF ON ON | OFF OFF ON OFF OFF ON OFF ON OFF ON | OFF ON OFF ON OFF ON OFF ON OFF ON OFF ON |

DIP - B

| ITEM | DESCRIPTION | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|----------------------------|---|-----------|-----------|-------------------------------------|--------------------------------------|--|-------------------------------------|-------------------------------------|-------------------------------------|
| SOUND DURING DEMONSTRATION | WITH SOUND WITHOUT SOUND | OFF ON | | | | | | | |
| CONTINUE | CONTINUE WITHOUT CONTINUE | | OFF ON | | | | | | |
| COIN 2 | 1 coin 1 credit 1 - 2 1 - 3 1 - 4 1 - 5 2 - 1 3 - 1 4 - 1 | | | OFF OFF OFF ON ON ON | OFF OFF ON OFF OFF ON | OFF ON OFF ON OFF ON OFF | | | |
| COIN 1 | 1 coin 1 credit 1 - 2 1 - 3 1 - 4 1 - 5 2 - 1 3 - 1 4 - 1 | | | | | | OFF OFF OFF ON ON ON | OFF ON ON OFF OFF ON | OFF ON OFF ON OFF ON |

GAME DESCRIPTION 1943

- 1943 is a 2 players Simutaneous Game.
- 2nd player can buy in at any time.
- Button one : shoot
- Button two: causes lightning and cyclone.
- Button one and two: simutaneously to loop.
- 2 players can loan each other their energy by simply flying on top of one another.
- Shoot "POW" to select power-up weapons.

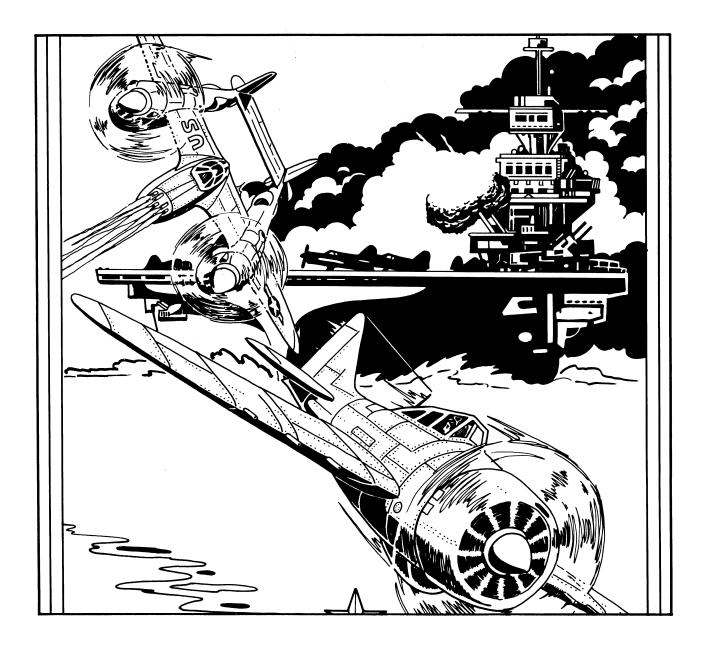

Forty years ago, at the height of World War II, the Japanese main squadron tasted defeat off the coast of the midway Islands. Some say this battle greatly changed the outcome of the war.

Installation Procedures

Something To Think About

Your final product will be a new game.

You have made a wise decision to transform a game that has seen better days in the all important cash box into a **new game**. This is by far the most cost effective alternative to maximize the return of your initial investment. All you provide is the cabinet with a power supply and a monitor. Oh yes, you will need a touch of elbow grease. And that's it! We provide the rest. The end result is . . . a **new game** at a very low cost.

Fact: Spend a little time on the cabinet's appearance (i.e. marquee, control panel and cabinet graphics). With a little paint, some wood putty and new lights, you will raise the profits of any game. . .especially with the introduction of a **new game** package.

The **new game** look should always apply to the inside of your game as well as the outside. A few wire ties and shrink tubing on your harness; some fastening hardware on your subassemblies and a sweep with the ol' vacuum cleaner will ensure that unnecessary *glitches* do not occur.

Remember: You are creating a new game.

If you have any questions or just need some advice on any of your **new game** transformations, don't hesitate in giving a member of our technical staff a call.

Let's Get Our Hands Dirty

Preparing the Original Game for the New Game

Remove the following:

- 1. Main logic board(s)
- 2. Control panel
- 3. Monitor plexiglass

- 4. Monitor Bezel
- 5. Marquee
- 6. Graphics

I would recommend painting your cabinet to give it a fresh new look. (If it is geographically inconvenient to make use of our facilities, you may consider having an auto body shop take care of your painting needs.)

If your cabinet has wood grain sides; remove old graphics and adhesive (adhesive may be removed with **lacquer** thinner.

If you intend to use your original plexiglass, be sure it is in mint condition or it should be replaced.

Thoroughly clean out your cabinet.

Time To Install Your New Goodies

Before You Start...Remember DO NOT Do This Work With The Power On!

Logic P.C.B. Cage

Mount the logic cage securely (away from power supply).

- A Mark and drill pilot holes (3/32").
- B Place the logic cage (bottom) over the holes and secure it with the supplied wood screws.
- C Install the P.C.B. into the logic cage. Use feet and spacers supplied and adjust them so that the screws will go through the slots int he cage bottom.

Note: Leave the cage cover off until you have attached the entire wire harness and have tested the game for proper operation.

Wire Harness

Attach the wire harness connector to the main logic board. **CAUTION:** Sometimes the connector is not keyed and it is very easy to install it reversed on the logic board. Even if it is keyed, always **triple check** to be sure the wire inputs were connected correctly to the connector and the connector to the logic board.

Connecting the Wire Harness to the Existing Wires

When you hook up the control panel, power supply, monitor or other subassemblies that remain in the game cabinet to your new wire harness, try and use their existing secondary connectors.

- 1. Cut the original wire approximately three inches from the original connector. Strip off about one half inch of insulation.
- 2. Solder the new wire designated for that position to the original wire you just stripped.

Warning: DO NOT JUST TIE THE WIRES TOGETHER. THIS CAN CAUSE NAGGING INTERMITTENT PROBLEMS THROUGH LOOSE CONNECTIONS OR OXIDATION OR BOTH. Always take the time to do it right.

- 3. Melt shrink tubing around all your in-line wire connections. Do not use electrical tape. Tape could unravel over a period of time due to the cabinet heat and cause you a great deal of trouble.
- 4. Use wire tie wraps, and secure the cable to the cabinet whenever it seems necessary. Remember this is a **new game**, not a sloppy conversion.

Power Wires

- 1. Connect the wires that are designated for your power supply. You will need a supply of +5V, +12V & ground. Your **new game** package may not require all of the voltages that were used in the original game. Tie off any unused wires.
- 2. You will notice that you probably have more than one wire for each voltage. It is a good idea to use all wires supplied (double up if it is necessary). This will help to ensure that you don't overload the edge connector pins and cause them to "burn".

Monitor Wires

You will be connecting the wires designated for the RED, GREEN & BLUE video guns along with the SYNC & GROUND wires.

NOTE...CONCERNING SYNC:

Your **new game** only calls for one sync wire connection, this is called **composite sync** (horizontal and vertical tied together). This composite sync is also **negative**. Most monitors have supply positions for both negative and positive sync. You can check your monitor manual or call our technical department for assistance.

Speaker Wires

Find the two wires that are designated for the speaker and hook 'em on up.

Coin Door Wires

- 1. Connect the designated wires to the coin switches and meter.
- 2. You can connect your door lamps to the unused -5V power supply. Some games have separate power outputs for the coin door lamps.
- 3. **Be sure** to clean and lubricate your old coin mechanisms. Keep the money coming in.

GUESS WHAT?

You are almost done with the electrical connections of your **new game**. All you have left is the control panel wiring. But we are going to hold off on that for right now. We have a few other things we need to do first. So why don't you go ahead and get yourself a drink of water and stretch your legs. When you return, we can take a fresh look at your progress and then move forward.

Smoke Test

What Test?

Don't worry. All this means is that you are ready to apply power to the system for the first time and you pray that there will be no smoke from a simple oversight. You are just about ready to power up the logic board. But first we need to recheck your work.

- Carefully inspect the game for loose power wires, exposed connections and extra fastening hardware.
- Make sure the logic board, board cage, monitor and power supply are securely fastened in place.
- 3. **Double check** the connectors to be sure they are wired and connected properly.
- 4. Set the dip switches on the logic board to the factory recommendations.

Time to Apply Power:

- 1. Look and smell for smoke. (TURN OFF IMMEDIATELY IF ANY IS NOTICED)
- 2. Listen for game sounds.

If after one minute you have not heard any sounds:

- A) Check for proper dip switch settings.
- B) Adjust volume control and check speaker connections.
- C) Check the +12V power supply to the logic board.


NOTE: If you do get sounds, but they are a little fuzzy, switch the wires around on the speaker. See page 12 for more helpful hints.

3. How is the monitor image?

A) Is the picture in sync?

If your picture has the top and bottom halves of the screen reversed and it will not stop rolling, change your sync polarity on the monitor. (Positive to negative).

If your monitor does not have dual polarity positions for sync, then you will need to reverse the sync yourself by installing a simple one I.C. circuit between the logic board and the monitor. (The following illustration shows a hookup for both **composite** and **separate** syncs.

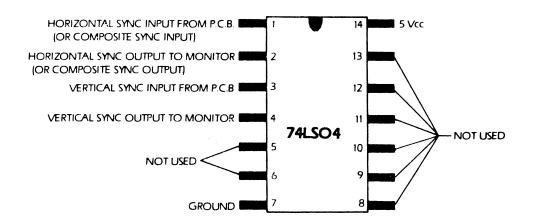

B) Now how's your picture?

- It it centered?
- Is it too bright or dim?
- Is it in focus?

Check your monitor manual for these adjustments. If your screen looks "off", then your **new game** transformation may have been in vain. So let's take the time to make the monitor look great.

C) Is the picture upside-down?

Dip switch 3 on switch bank "B" should solve your problems.

Control Panel Assembly

- 1. Remove the buttons, joysticks and wire harness and put them aside fro now. Do not remove the original panel overlay until the new holes have been drilled.
- 2. Mark positions on the panel for the new holes.
 - **CAPCOM** supplies a clear 1/8" thick piece of plexiglass with every **new game** package to cover the control panel. We feel that your **new game** investment is well worth protecting...and the control panel is the first place to show wear and tear.
 - You will need to cut this piece to size. Use the control panel as a template.
 - Use a razor knife to score the plexiglass **deeply**. Then use a pair of pliers to break away the extra plexiglass.
- 3. Now drill the holes in your panel that you have marked off for the *buttons*, *joystick* and *bolts*.
 - Hint: For best results, use a chassis or sheet metal punch for button holes.
- 4. Drill the same holes on your plexiglass panel protector. Once again use your panel as a template.
 - **Hint:** To avoid chipping while you are drilling the holes, place the plexiglass securely on a soft wood surface and use a plexiglass drill bit and hole cutter.
- 5. The holes are now all cut. Smooth them out on your panel and plexiglass with a fine toothed file.
- 6. Remove the original graphics overlay from the panel. Clean up the panel and install your **CAPCOM** graphics.
 - **Make It Easier:** Peel the top half of the protective backing off of your graphics. Start from the center and smooth out your overlay. Make sure you have about an inch extra coming off the top. *No bubbles please*. Now peel off the bottom half and do the same as you did for the top.
- 7. Adhere the instruction and function labels.
- 8. Install the Plex Control Cover over your completed **new game** panel. **Note:** Be sure to bolt the plexiglass securely to the panel.
- 9. Mount the joystick and the buttons to the panel and wire them up. (Use the existing Panel wiring if possible)

Marquee Installation

Using the original marquee as a template, Center your **new game** marquee graphics and score the new marquee deeply to fit the cabinet. Break off the excess with pliers.

Be sure the light behind the marquee works. Everything should **always work** on a new game.

Take your time ... Don't forget this is going to be a **new game.**

Side Graphic Installation

- 1. Be sure sides of game are clean and free of old adhesive, dust, etc.
- 2. Mark position of decal with eraseable pen or pencil (centered on upper half of cabinet).
- 3. Peel off top 1/4 of decal backing and apply to cabinet with a smoothing motion (use a soft rag). Continue peeling off backing and smoothing.
- 4. Remove any small bubbles with a pin or razor blade (pop them!)


Finishing Touches

- Check the game inside and out for any imperfections. Secure any loose wiring or fastening hardware.
- 2. Make sure the coin door is tight and the coin mechs are well adjusted. A game is no good to anybody if you can't get a coin into it.
- Once again go over every step of this new game transformation in your mind.
 Be sure everything is correct and to your liking.
- 4. Power up the game.
 - A. Check all the coin switches. (Does the coin meter work?)
 - B. Play your new game.
 - Are all the player controls working?
 - Are the game sounds present?
 - Is the volume level proper?
 - Are the dip switches set properly?


Well, that's about it. Good Luck.

HELPFUL HINTS


Simple audio check for Board: TYPICAL AUDIO CIRCUIT FOR CAPCOM BOARD:

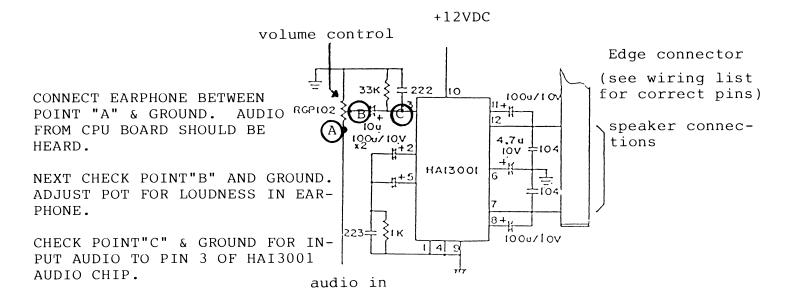

Also make sure Ground from +5VDC and Ground from +12VDC ARE TIED TOGETHER. IF GROUNDS ARE FLOATING, you could have audio problems.

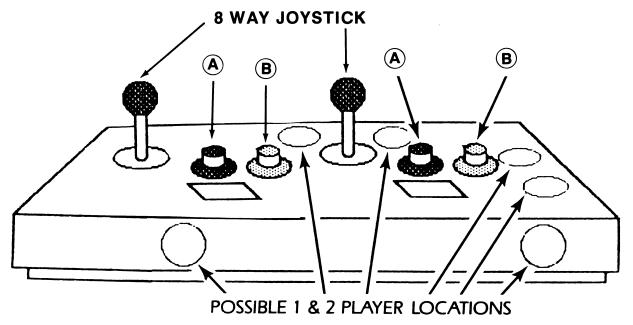

Control Panel Positions

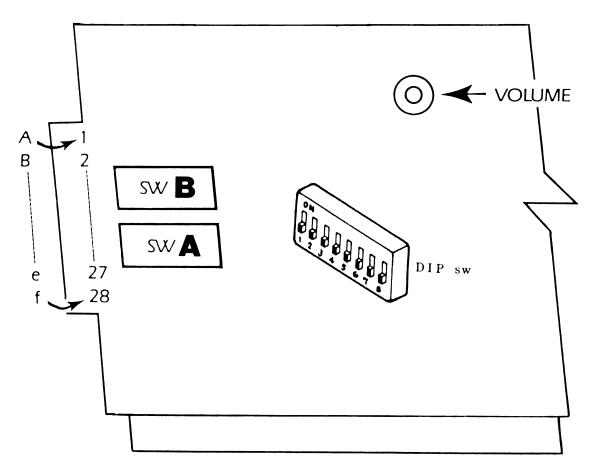

PCB Layout



MAIN HARNESS CONNECTIONS

| Wire Color | Solder Side | | | Parts Side | Wire Color |
|------------|-------------|----|----|-------------|------------|
| Black | Ground | Α | 1 | Ground | Black |
| Black | Ground | В | 2 | Ground | Black |
| Red | +5VDC | С | 3 | +5VDC | Red |
| Red | +5VDC | D | 4 | +5VDC | Red |
| White | -5VDC | E. | 5 | -5DVC | White |
| Yellow | +12VDC | F | 6 | +12VDC | Yellow |
| | Key | Н | 7 | Key | |
| Brown | Counter 2 | J | 8 | Counter 1 | Brown |
| Red | Not Used | К | 9 | Not Used | Red |
| Black | Speaker (-) | L | 10 | Speaker (+) | White |
| Blue | Not Used | М | 11 | Not Used | Blue |
| Green | Video Green | N | 12 | Video Red | Red |
| Gray | Video Sync | Р | 13 | Video Blue | Blue |
| Red | Service SW | R | 14 | Video Gnd | Black |
| Brown | Not Used | S | 15 | Not Used | Brown |
| White | Coin 2 | Т | 16 | Coin 1 | White |
| Gray | 2P Select | U | 17 | 1P Select | Gray |
| Violet | 2PUp | V | 18 | 1PUp | Violet |
| Blue | 2P Down | W | 19 | 1P Down | Blue |
| Green | 2P Left | Х | 20 | 1P Left | Green |
| Yellow | 2P Right | Υ | 21 | 1P Right | Yellow |
| Orange | 2P Button A | Z | 22 | 1P Button A | Orange |
| Red | 2P Button B | а | 23 | 1P Button B | Red |
| Brown | Not Used | b | 24 | Not Used | Brown |
| Blue | Not Used | С | 25 | Not Used | Blue |
| Blue | Not Used | d | 26 | Not Used | Blue |
| Black | Ground | е | 27 | Ground | Black |
| | Ground | f | 28 | Ground | Black |

CAPCOM GAME OWNER:

Please fill out card and register for Free drawing at COIN-OP SHOWS. YOU NEED NOT BE PRESENT TO WIN.

ACME '88 RENO, NEVADA AMOA '88 CHICAGO, ILL

Remember to fill in S/N of PCB (S/N IS REQUIRED FOR DRAWING).

1943 SCHEMATICS AVAILABLE FOR CHARGE OF \$5.00 FROM CAPCOM USA.

REGISTER FOR FREE DRAWING

15

| FROM: | |
|-------|---|
| | · |

BUSINESS REPLY MAIL

FIRST CLASS

PERMIT #1685

SUNNYVALE, CA

Postage will be paid by addressee:

CAPCOM U.S.A., INC.

COIN-UP DIVISION 1283-C Old Mountain View/Alviso Rd. Sunnyvale, CA 94089 NO POSTAGE NECESSARY IF MAILED IN THE UNITED STATES



1283-C Mountain View/Alviso Rd. Sunnyvale, CA 94089 (408) 745-7081

| COMPANY NAME |
|---|
| |
| LAST NAME FIRST NAME |
| |
| ADDRESS |
| |
| CITY STATE ZIP CODE AREA CODE PHONE NO. |
| PRODUCT PURCHASED: |
| PURCHASED FROM: DATE OF PURCHASE MONTH DAY YEAR |
| S/N |
| HOW WOULD YOU RATE THIS GAME: EXCELLENT VERY GOOD FAIR POOR |
| HOW DID YOU HEAR ABOUT THIS GAME: MAGAZINE |
| DO YOU OWN ANY OTHER CAPCOM ARCADE GAMES? YES I NO I PLAN TO BUY IN NEAR FUTURE I |
| WHAT TYPE OF ROUTE DO YOU OWN: ARCADE SMALL ROUTE LARGE ROUTE HOW MANY GAMES DO YOU OWN: |
| WHAT CAPCOM ARCADE GAMES ARE YOU FAMILIAR WITH: SPEED RUMBLER SECTION Z LEGENDARY WINGS AVENGERS 1943 STREET FIGHTER OTHER |
| COMMENTS: |
| |