


INSTRUCTION MANUAL

FOR ANY VERTICALLY MOUNTED RASTAR SCAN MONITOR GAME

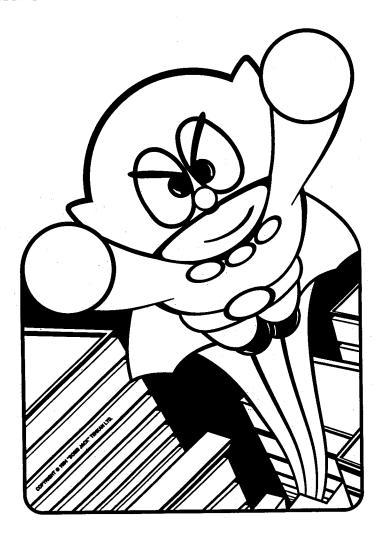

MARKETED IN NORTH AMERICA BY KITCO 55 ARMSTRONG ROAD • DES PLAINES, IL 60018 • (312) 678-2890

©COPYRIGHT 1984 TEHKAN LTD.

BOMB JACK DIP SWITCH SETTINGS:

DIP	SWI	ITCH 1	1	2	3	4	5	6	7	8
	0	1COIN - 1PLAY	OFF	OFF						
		1COIN - 2PLAY	ON	OFF						
COIN1		1COIN - 3PLAY	OFF	ON						
		1COIN - 6PLAY	ON	ON						
	0	1COIN - 1PLAY		<u></u>	OFF	OFF				
		2COIN - 1PLAY			ON	OFF				
COIN2		1COIN - 2PLAY		ļ	OFF	ON				
		1COIN - 3PLAY			ON	ON				
	0	3 JACKS		<u> </u>	<u> </u>		OFF	OFF		
NUMBER		4 JACKS					ON	OFF		
OF MEN		5 JACKS		ļ			OFF	ON		
		2 JACKS			<u> </u>		ON	ON		
		COCKTAIL TABLE				<u> </u>			OFF	
TYPE	0	UPRIGHT				<u> </u>	<u> </u>	L	ON	
DEMONSTRATION		NON SOUND						ļ		OFF
SOUND	0	SOUND		<u> </u>			<u> </u>			ON

DIP SWITCH 2		1	2	3	4	5	6	7	8	
DIFFICULTY 1 (SPEED OF MECHANICAL BIRD)		MODERATE				OFF	OFF			
		DIFFICULT				ON	OFF			
	0	MORE DIFFICULT				OFF	ON			
		TOP DIFFICULT				ON	ON			
DIFFICULTY 2 (ENEMIES)		EASY						ON	OFF	
		MODERATE						OFF	OFF	
NUMBERS	0	DIFFICULT						OFF	ON	
AND SPEED)		MORE DIFFICULT			Ī .			ON	ON	
RATIO OF SPECIAL COIN APPEARANCE	0	EASY								OFF
		DIFFICULT	ĺ							ON

SW 1, SW 2, SW 3 of Dip SW 2 are not used. Be sure to keep them in the OFF position when using.

O Factory Settings

BOMB JACK WIRE HARNESS:

WIRE COLOR	SOLDER SIDE	NO	COMPONENT SIDE	WIRE COLOR
Brown	2P RIGHT	1	2P LEFT	Yellow/Green
White/Yellow	2P UP	. 2	2P DOWN	Red/Black
Orange	2P JUMP	3		
		4		
White/Orange	1P RIGHT	5	1P LEFT	White/Green
Red/White	1P UP	6	1P DOWN	White/Black
Yellow/Black	1P JUMP	7		
		8		
Brown/White	COIN SW1	9	COIN SW2	Blue/Brown
Green/Blue	1P START	10	2P START	Brown/Green
Black	GND	11	GND	Black
Black	GND	12	GND	Black
Black	GND	13	GND	Black
Orange/White	SPEAKER(+)	14	SPEAKER(-)	Orange/Green
Blue/Yellow	+12V	15	+12V	Blue/Yellow
-		16		
Yellow	+5V	17	+5V	Yellow
Yellow	+5V	18	+5V	Yellow

JOYSTICK LEVER ... 8 directions



			1
1			·
	1	BLUE	BLUE
	2	GREEN	GREEN
	3	RED	RED
	4	GND	BLACK
	5	SYNC	WHITE
	6	GND	BLACK

DIP SW2 DIP SW1

SOUND VR

TO TV 6P CONNECTOR

POWER SOURCE + 5V 5A

+12V 1A

(AF Amp. BTL system)