

Technical Manual for

Space

Fortress

INTRODUCTION TO SPACE FORTRESS

INTRODUCTION

Space Fortress is a one or two player outer space action game designed with features geared for maximum player appeal: a progressively difficult competitive level and a clearly defined "enemy" which must be both attacked and avoided at various points in the course of play.

GAME PLAY

The center of the playfield is occupied by the "Space Fortress" which is programmed to constantly home in on the players' ships. Surrounding the "Space Fortress" are three concentric "energy rings" of twelve segments each which serve as both a protective perimeter for the "Space Fortress" and a source of points for the player. Contained within the "energy rings" are three protective "mines" which seek out the players' ships and destroy them upon collision. The movements of the "mines" are programmed to simulate the actions of heat-seeking missiles.

The object of the game of "Space Fortress" is to score the maximum number of points possible. This is accomplished by the combination of three elements:
a) exploding the ring segments; b) exploding the "Space Fortress";
c) avoiding the Space Fortress mines. A player's turn is over when his ship has been destroyed. The number of ships per game is set by the operator.

Points are awarded as follows:

A. Hitting ring segments

1. outer ring-10 points per segment
2. center ring-20 points per segment
3. inner ring- 30 points per segment
(note: it takes two "hits" to destroy a segment)

B. Hitting "Space Fortress"

1. 1,440 points plus extra ship for each hit.

C. Avoiding "mines"

1. No points are awarded for shooting the "mines", but they must be avoided or shot to keep the game going.

For maximum scoring, a player will want to shoot out sections of the energy rings in order to give him a shot at the Space Fortress in the center of the screen. As play progresses, there are two facts a player must keep in mind: 1) exploding all segments in a given ring will cause the entire ring to reappear - thereby eliminating a potential shot at the Space Fortress in the center; and 2) exploding the rings in a manner that gives you a shot at the Space Fortress will also give the Space Fortress a shot at you. The Space Fortress is programmed so that its nose always seeks out the player's ship. If there is a shot at the player, he will take it.

When the Space Fortress is hit by a player's missile, it will first implode and then explode with all remaining ring segments.

After a one-second delay, the Space Fortress will reappear with all three ring segments. If the Space Fortress shoots the player, his turn is over.

MODES OF PLAY

There are two modes of play in Space Fortress: a) The one player mode; and b) the two player mode.

The one player mode is activated when a coin is accepted and the player pushes the one player button. As play begins, the Space Fortress will appear in the center of the screen surrounded by its three "energy rings". The player's ship appears about halfway up on the right hand edge.

By using the control buttons to move forward, right or left, the player maneuvers about the screen using the firing button to launch missiles.

Points are scored by destroying the energy ring segments or the Space Fortress itself. Exploding the Space Fortress gives an extra ship as well as points. No points are given for the "mines" that attack the player.

The player's ship can be destroyed in two ways: by collision with the mines or by a hit from the Space Fortress's torpedo. The mines are launched from the rings and attack the player for approximately ten seconds or until shot. The Space Fortress's torpedoes are launched only when there is a clear shot at the player through all three rings. At this time the player also has his shot at the Space Fortress. Both the Space Fortress and the mines get smarter and faster as the game progresses.

The two player mode is activated when the coins are accepted and the two player button is pushed. Each player plays his turn until his ship is exploded. If a player scores more extra ships than his opponent, he will be allowed to play the extra ships even though his opponent's game is over.

The game of SPACE FORTRESS is not based on time units. The battle rages on until all the player's ships are destroyed. The length of the game depends solely on the skill of the player. It's the age-old challenge of man versus machine.

RECEIVING AND INSTALLATING SPACE FORTRESS

RECEIVING INSPECTION

Your game was shipped in ready-to-play condition. However, after removal of the shipping carton, a brief visual examination is suggested.

Naturally, you'll want to make note of any physical damage to the game cabinet and its external components for freight claim purposes. Considering the quality of the shipping carton, any damage to the exterior would indicate possible interior damage as well.

The interior of the game should also undergo a brief examination for: loose mounting hardware (check to be sure that the major components are still securely mounted); disconnected or loose wires, cables or harnesses; electronic devices loose in their sockets; ect.

At this time the game serial number should be logged. Please remember that the game serial number will be required if you need service from your distributor.

ELECTRICAL REQUIREMENTS

Unless specified otherwise, your game was shipped to operate at 220 VAC. Four other voltage settings are possible. The power supply chassis has a table which shows the voltage options and fusing requirements.

A good earth ground is essential for the proper operation of this game or for that matter any electronic device. Problems with instability and erratic operation of computertype devices can usually be traced to an ineffective ground system. Therefore, plug the game into a properly wired 3 prong outlet. If a 3 prong to 2 prong AC adaptor must be used, an alternate method of grounding the third prong must be used.

INITIAL ADJUSTMENTS


NOTE

When the game is connected to AC power, one of the game sounds may be heard. This is normal.

The audio level (volume) can be easily adjusted and THIS IS ACHIEVED BY ROTATION OF THE VOLUME POT. The audio level should compete with other machines "on the floor" to maximize play time.

Display brightness is another easy adjustment. The monitor assembly has several adjustments, but the brightness control is the only one which does not require a "screwdriver" for rotation. Keep the brightness at the correct level for appeal.

TEST
PATTERN

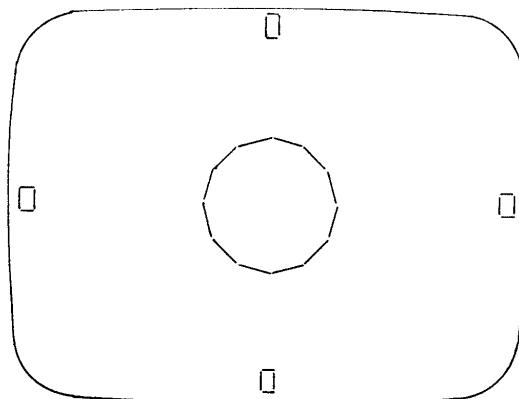

SPACE FORTRESS OPTION SWITCHES
(Located on logic board)

	OFF	ON
1	[]	
2	[]	
3	[]	
4	[]	
5	[]	
6	[]	
7	[]	

- 1] SHIPS PER GAME
- 2] SEE TABLE 2-1
- 3] CREDITS PER COIN
- 4] SEE TABLE 2-2
- 5] NOT USED
- 6] NOT USED
- 7] ON=NORMAL OPERATION
OFF= TEST PATTERN

SWITCH 2	SWITCH 1	SHIPS / GAME
ON	ON	6
OFF	ON	5
ON	OFF	4
OFF	OFF	3

To adjust coin receptor, operate on the board (coin switches adjustment), moving switches n°3 and n°4 of game board, in "ON" position.
Adjust, as wished, switches on table 2-2

TABLE 2-1

TABLE 2-2
COIN SWITCH ADJUSTMENT

COIN MECHANISM 1


1	2	3	8	
OFF	ON	OFF	OFF	2 COINS - 1 PLAY
OFF	ON	OFF	ON	1 COIN - 1 PLAY
OFF	OFF	ON	ON	1 COIN - 2 PLAYS
OFF	ON	ON	ON	1 COIN - 3 PLAYS
ON	OFF	OFF	ON	1 COIN - 4 PLAYS
ON	ON	OFF	ON	1 COIN - 5 PLAYS
ON	OFF	ON	ON	1 COIN - 6 PLAYS
ON	ON	ON	ON	1 COIN - 7 PLAYS

COIN MECHANISM 2

4	5	6	7	
OFF	ON	OFF	OFF	2 COINS - 1 PLAY
OFF	ON	OFF	ON	1 COIN - 1 PLAY
OFF	OFF	ON	ON	1 COIN - 2 PLAYS
OFF	ON	ON	ON	1 COIN - 3 PLAYS
ON	OFF	OFF	ON	1 COIN - 4 PLAYS
ON	ON	OFF	ON	1 COIN - 5 PLAYS
ON	OFF	ON	ON	1 COIN - 6 PLAYS
ON	ON	ON	ON	1 COIN - 7 PLAYS

ATTENTION :

Do not use other possible combinations.

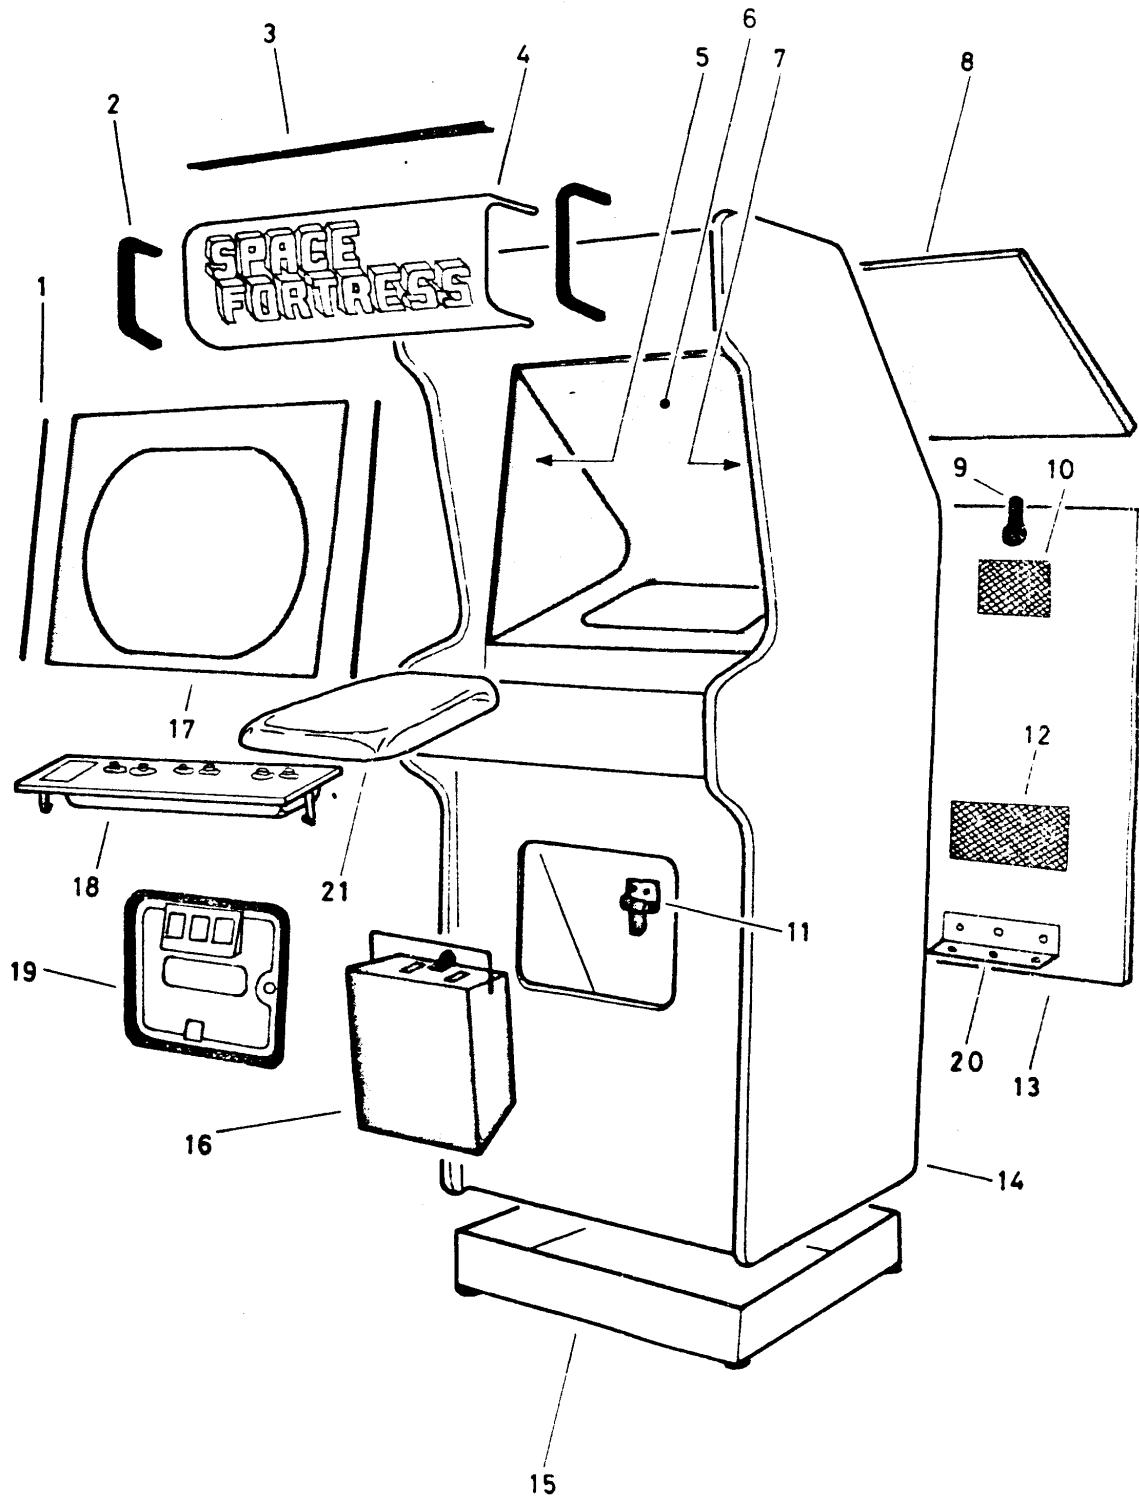

TAV. 1

- | | | |
|----|---------|---|
| 1 | MV 009 | Profilato Cornice |
| 2 | MV 034 | Guarnizione Nera |
| 3 | A 7286 | Guarnizione in Alluminio Anodizzato |
| 4 | MRB 388 | Pannello ad "U" Serigrafato " Space Fortress" |
| 5 | MRB 402 | Scenario Verticale Sinistro |
| 6 | MRB 404 | Scenario |
| 7 | MRB 403 | Scenario Verticale Destro |
| 8 | FB 075 | Sportello Superiore |
| 9 | B 7091 | Serratura |
| 10 | A 7295 | Rettangolo Rete Stirata (130 x 250) |
| 11 | B 6616 | Squadretta Fissaggio Cassetta Monete |
| 12 | A 7294 | Rete Stirata (180 x 180) |
| 13 | FB 074 | Sportello Posteriore |
| 14 | MRB 378 | Mobile Serigrafato |
| 15 | FB 071 | Zoccolo |
| 16 | B 7154 | Cassatta Monete |
| 17 | MRB 359 | Vetro serig. " Space Fortress" |
| 18 | C 8146 | Pannello Comandi assemblato a pulsanti |
| 19 | C 8109 | Sportello per Gettoniere |
| 20 | A 7260 | Angolare Rinforzo Mobile |
| 21 | MRB 399 | Schermatura in Plexiglass per Cinescopio |


PIASTRE SERIGRAFATE

6. Introduzione Monete

AUSTRALIA	5 OS CENTS PLAY P ser. B 5056 n.m. A 5007	BELGIO	10 FRS P ser. B 5047 n.m. A 5008
DANIMARCA & SVEZIA	10 Kr 3 PLAYS P ser. B 5074 n.m. A 5007	FRANCIA & SVIZZERA	5 Fr P ser. B 5035 n.m. A 5007
GERMANIA	5 Kr DM P ser. B 5065 n.m. A 4401	GIAPPONE	2 Fr 100 Ft 2 Ft P ser. B 5024 n.m. A 5008
INGHILTERRA	1 Kr DM P ser. B 5059 n.m. A 5008	ITALIA	50 Ft 100 LIRE P ser. B 4041 n.m. A 5007
LIBANO	10 P P ser. B 4062 n.m. A 5007	JUGOSLAVIA	200 LIRE P ser. B 5051 n.m. A 4399
OLANDA	50 P P ser. B 4091 n.m. A 4401	UNGHERIA	1 DIN P ser. B 5052 n.m. A 4398
PIASTRE SERIGRAFATE	10 P P ser. B 4062 n.m. A 5007	U.S.A. & CANADA	25¢ 50¢ P ser. B 4082 n.m. A 5007
	25 PL P ser. B 5059 n.m. A 5008		25¢ 50¢ P ser. B 5046 n.m. A 5008


C 8109
SPORTELLO PORTA
GETTONIERE
ASSEMBLATO

TAV. 3

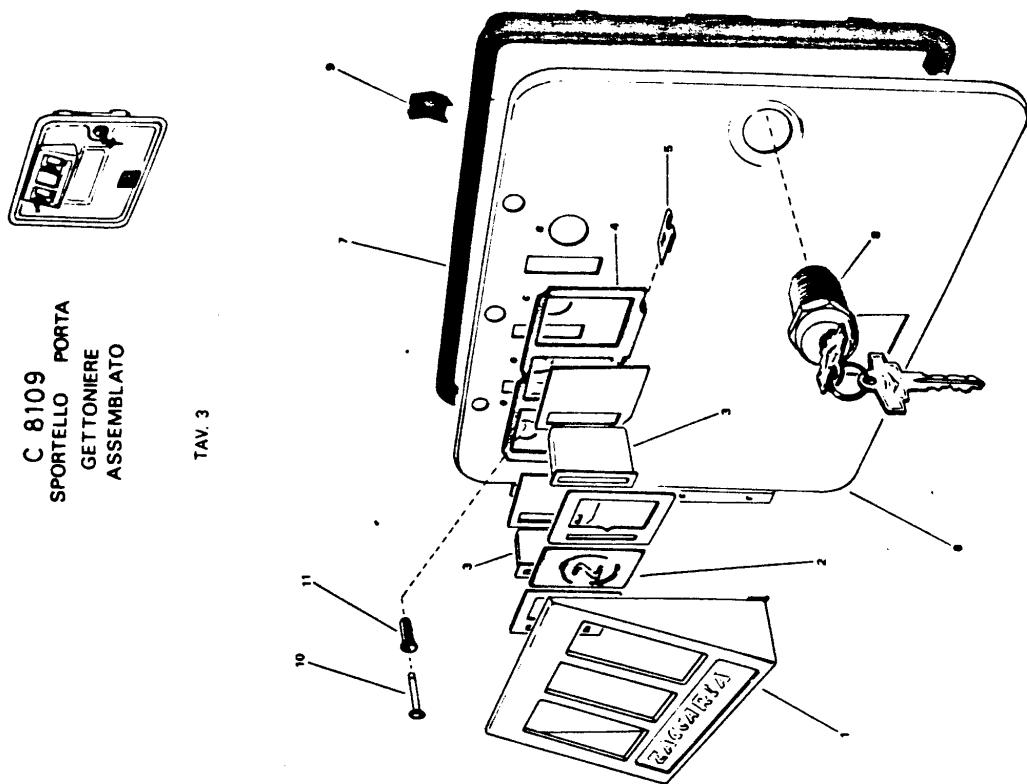

TAV. 4

C 8109 Sportello porta gettoniere assemblato

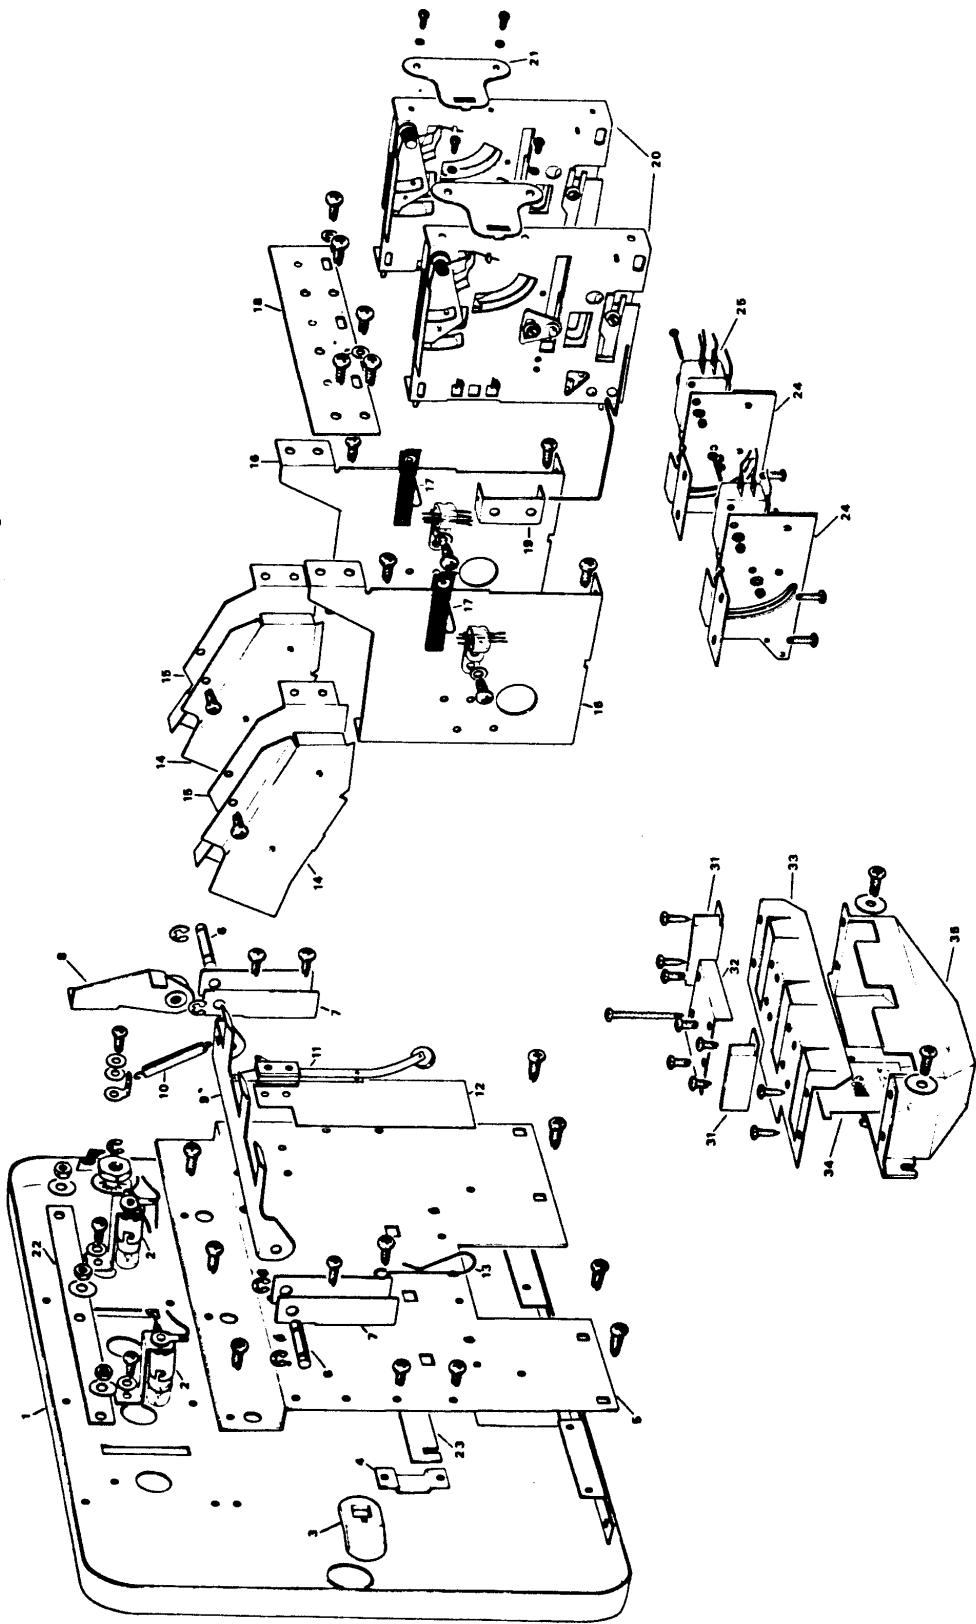

TAV. 3


C 8109 SPORTELLO PER GETTONIERE ASSEMBLATO

1	A SB 116	Frontalino Sportello con Cerniera
2	A 5009	Piastrina con Marchio
3	A 6008	Guida Moneta in Plastica
4	A 7005	Componente Fissaggio Accessori
5	A 4383	Piastrina Semidoppia
6	B 7194	Sportello con Cerniera
7	A 7236	Cornice in Alluminio Pressofuso
8	B 7153	Serratura
9	A 4460	Staffa Fissaggio Cornice
10	A 4031	Pulsante Scarto Moneta
11	A 4032	Componente per Pulsante


TAV. 4

1	B 7194	Sportello con Cerniera compl. di Accessori
2	B 5029	Porta Lampada Alto Sportello
3	A 4328	Leva per Serratura Sportello Anteriore
4	A 5002	Fermo Barra Arresto Moneta
5	A 7002	Piastra Supporto Gettoniera
6	A 4005	Perno per Cavallotto Sportello
7	A 6001	Cavallotto Sportello
8	B 6001	Leva con Boccola
9	A 6002	Leva di Scarto Gettoniera
10	A 5201	Molla richiamo Leva di Scarto
11	B 9015	Pacco Lamellare Tilt
12	A 5205	Cartoncino Isolatore Sportello
13	A 5021	Ferretto Porta Chiave Sportello
14	A 7009	Scorrimoneta Maschio
15	A 7008	Scorrimoneta Femmina
14+15	B 6076	Scorrimoneta Assemblato
16	B 7006	Supporto Gettoniera
17	A 5252	Forcellina Fissaggio Gettoniera
18	A 5014	Piastrina Accoppiamento Supp. Gettoniera
19	A 5015	Componente per Asta Arresto Moneta
20	B 7043	Gettoniera L. 50


20	B 7084	Gettoniera L. 100
"	B 7175	" L. 200
"	B 7092	" 25 €
"	B 7096	" 5 F
"	B 7097	" 10 F
"	B 7098	" 5 P
"	B 7099	" 10 P
"	B 7147	" 50 P
"	B 7111	" 0,50 pfg
"	B 7112	" 1 DM
"	B 7113	" 2 DM
"	B 7114	" 5 DM
"	B 7128	" 1 PS
"	B 7129	" 2 PS
"	B 7148	" 10 Fr Belgi
"	B 7233	" 5 Dinari
"	B 7234	" 10 Dinari
21	A 5114	Piastrina Fissaggio Gettoniera
22	A 5006	Asta per Frontalino
23	A 5001	Barra Arresto Moneta
24	B 6109	Piastra Porta Micro
25	B 5053	Micro Nero
"	B 5054	Micro Rosso
"	B 5055	Micro Bianco
31	A 5012	Squad. a 2 fori
32	A 5010	Squad. a 4 fori
33	A 6009	Copertura per Raccoglitore Monete
34	A 5011	Cancelletto
35	AS1028	Raccoglitore in Plastica

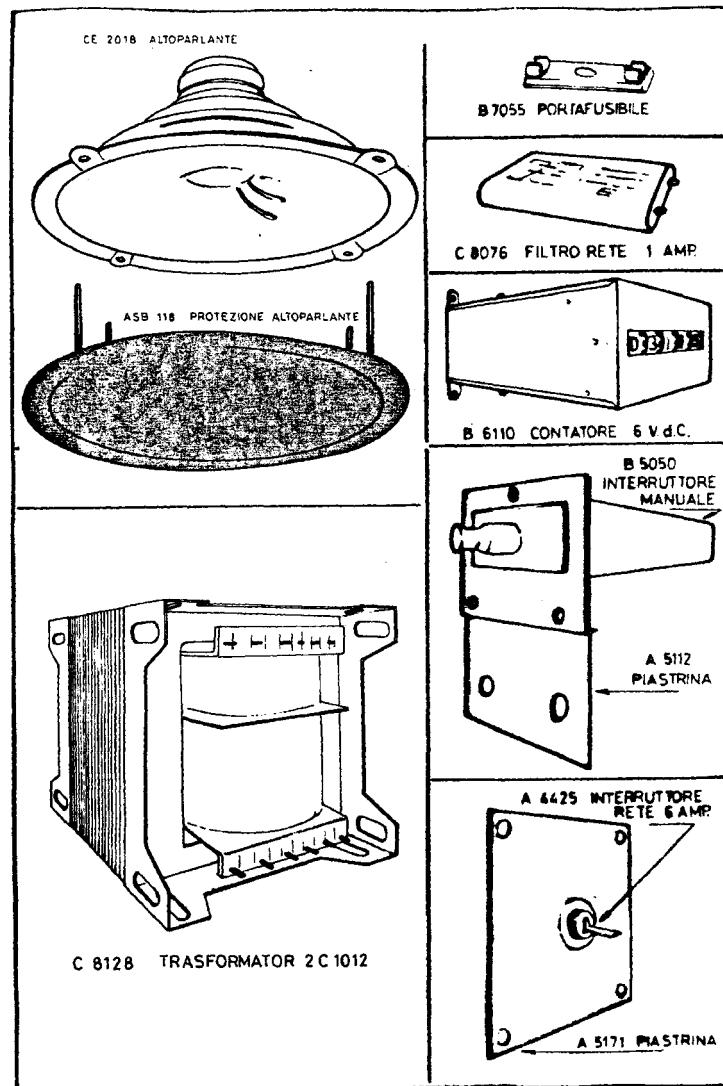


CEC 075 POWER BOARD P.C. 1B1126

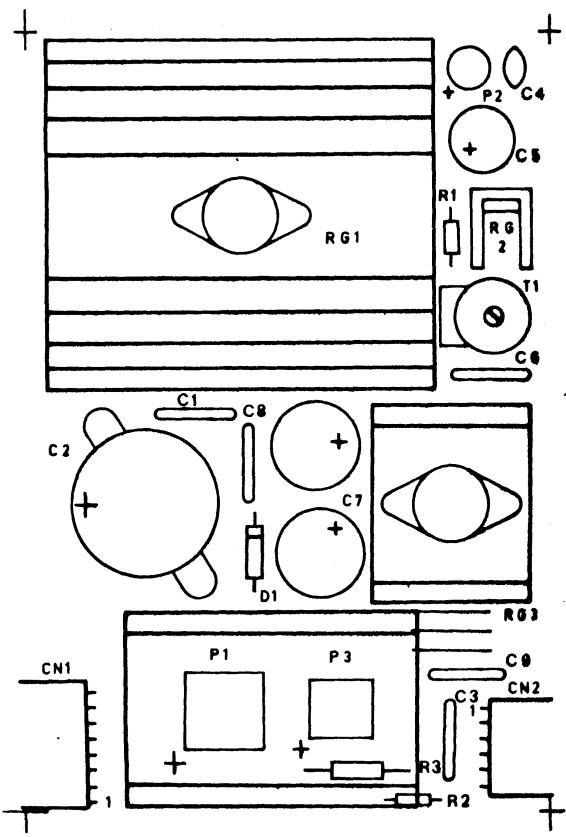


CEC 069 COIN SWITCHES ADJUSTMENT BOARD P.C. 1B1145

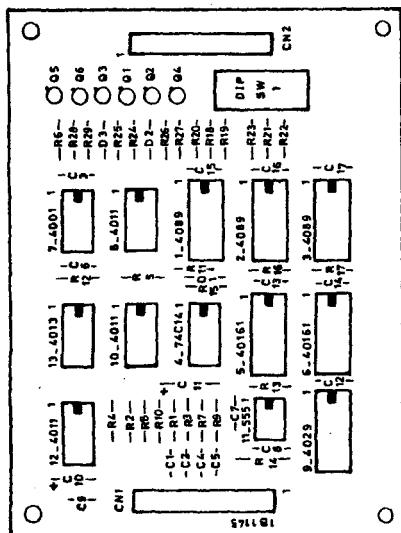

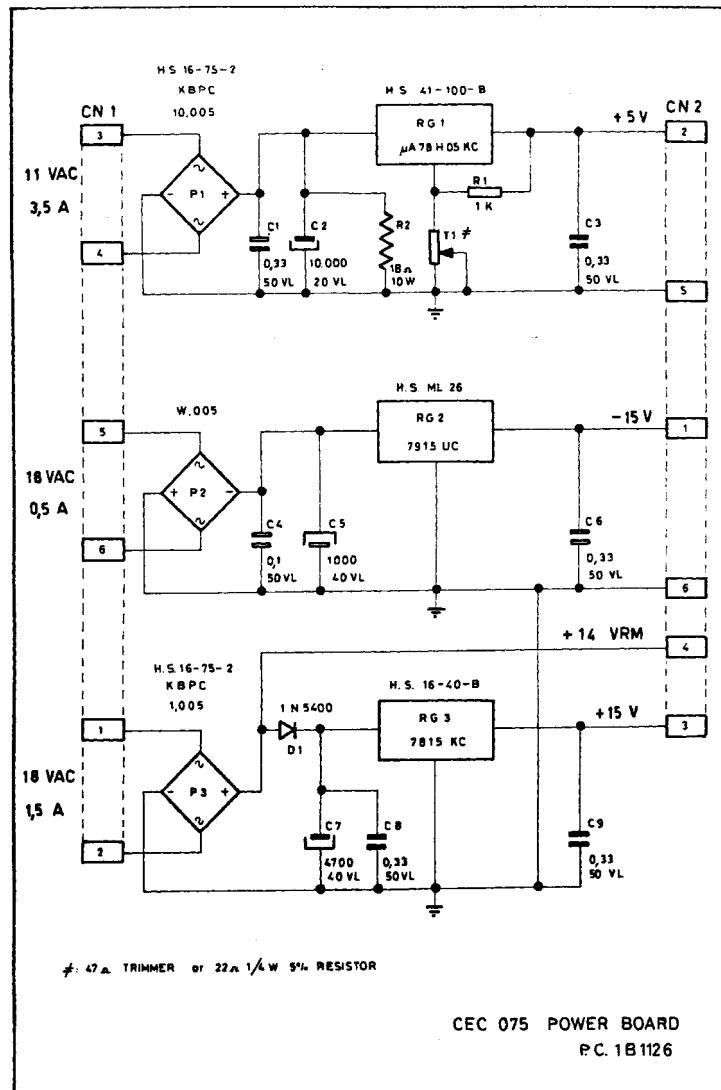

C 8146 Pannello comandi a 6 pulsanti

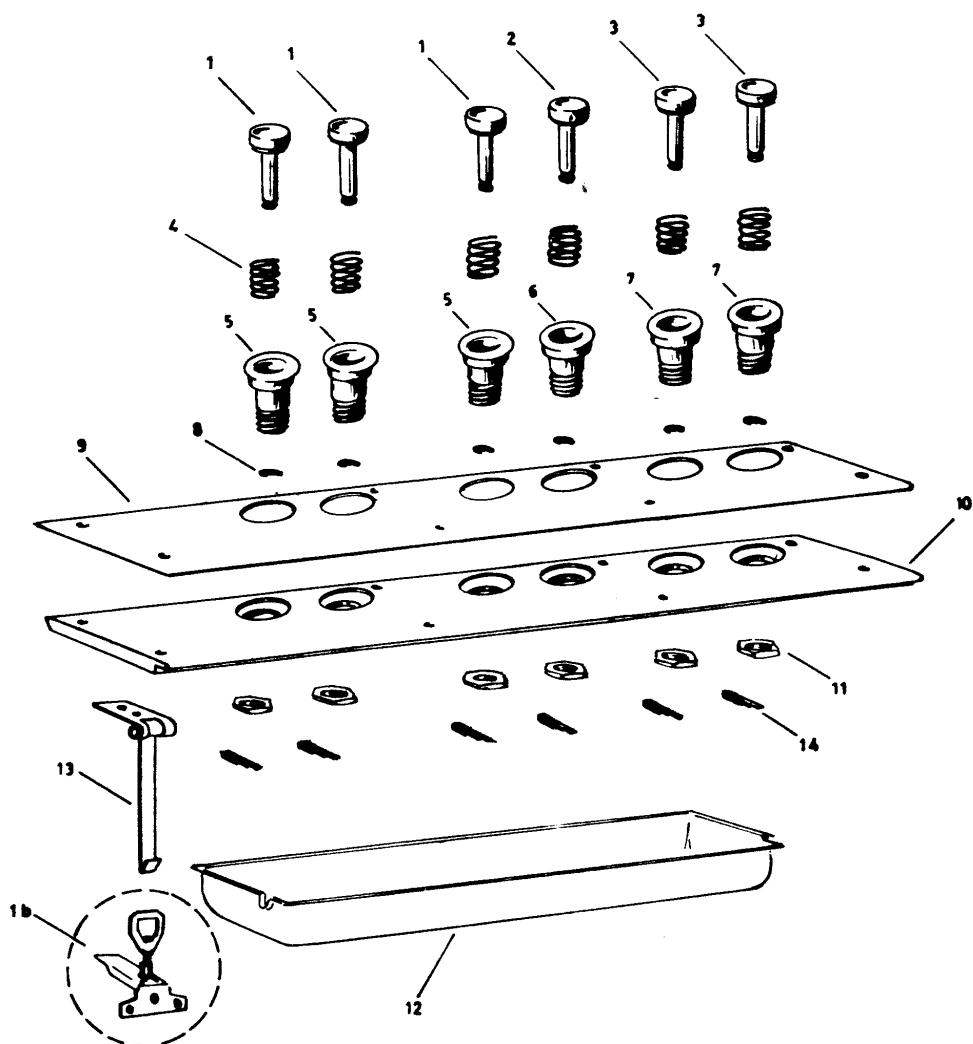


TAV. 2

C 8146 PANNELLO COMANDI A 6 PULSANTI


1	B 6113	Pulsante Verde
2	B 6130	Pulsante Rosso
3	B 6114	Pulsante Bianco
4	A 4272	Molla Richiamo Pulsante
5	A 5213	Corpo Pulsante Verde
6	A 5225	Corpo Pulsante Rosso
7	A 5211	Corpo Pulsante Bianco
8	A 4202	Anello Din mm. 6
9	MRB 384	Mascherina Comando serigrafata
10	FB 085	Tavoletta in Legno
11	A 5214	Dado Ferro Zinc. 16 MA Fiss. Corpo Pulsante
12	A 7194	Scatola Protezione Pacchi Lamellari
13	B 6118	Cerniera con Tirante
14	B 9021	Pacco Lamellare

1b B 6115 Bloccaggio a Leva Regolabile

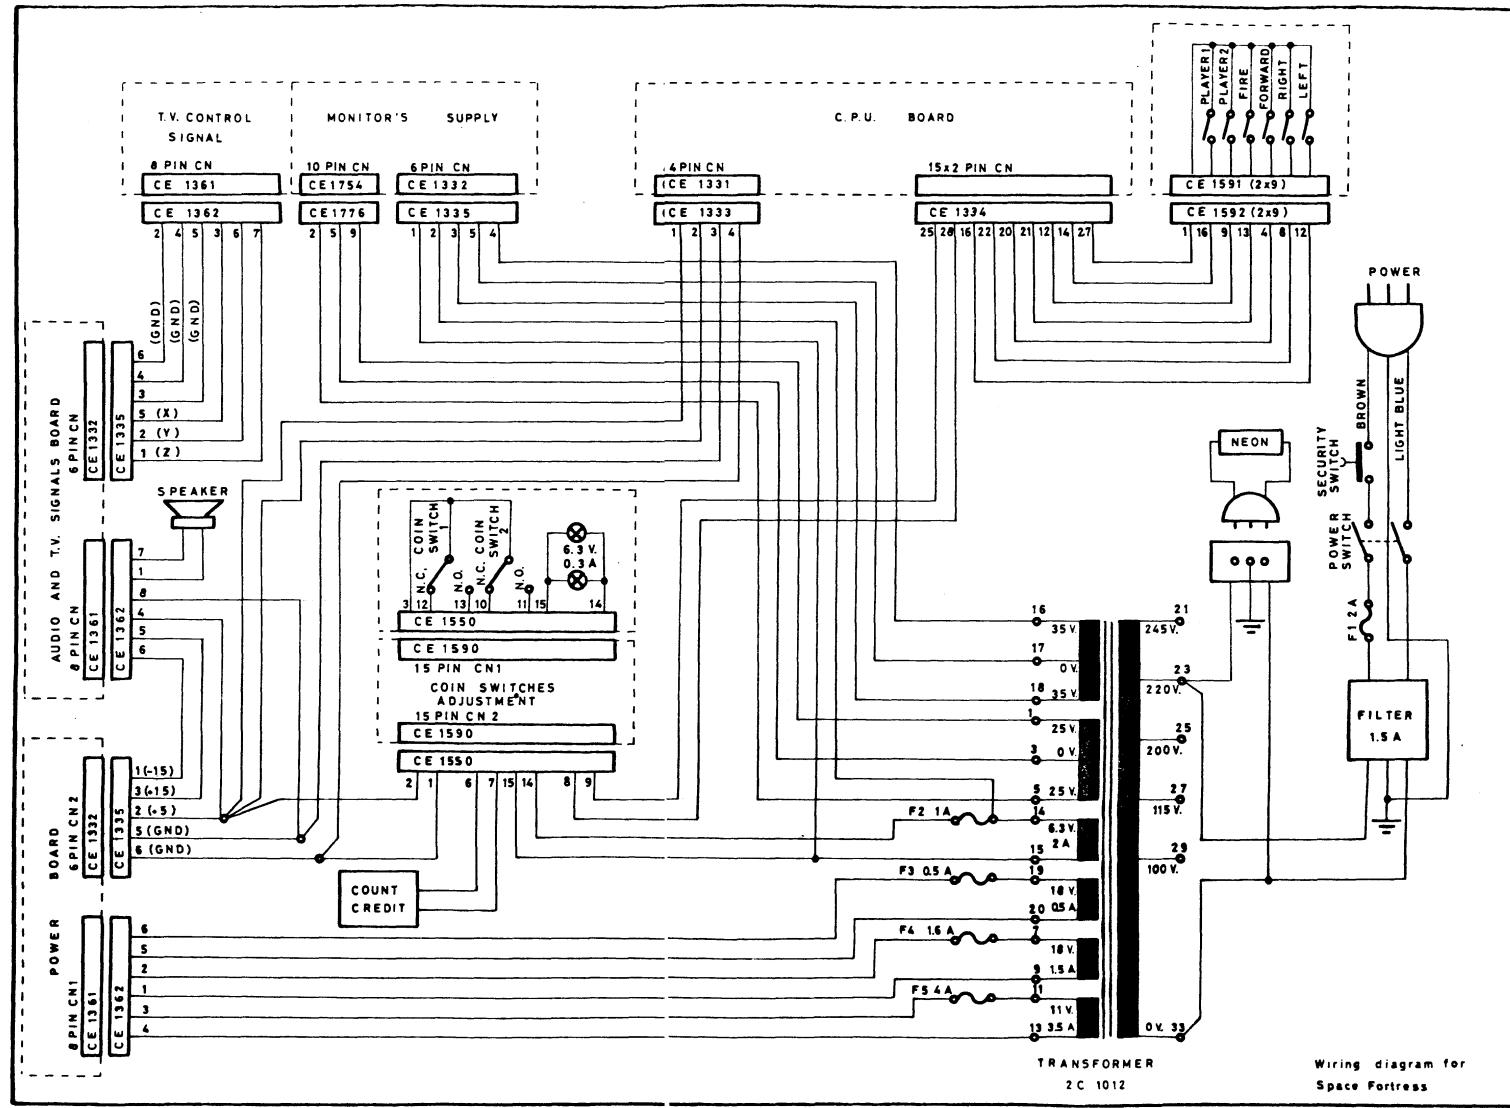


Wiring diagram for
Space Fortress

2C 1012

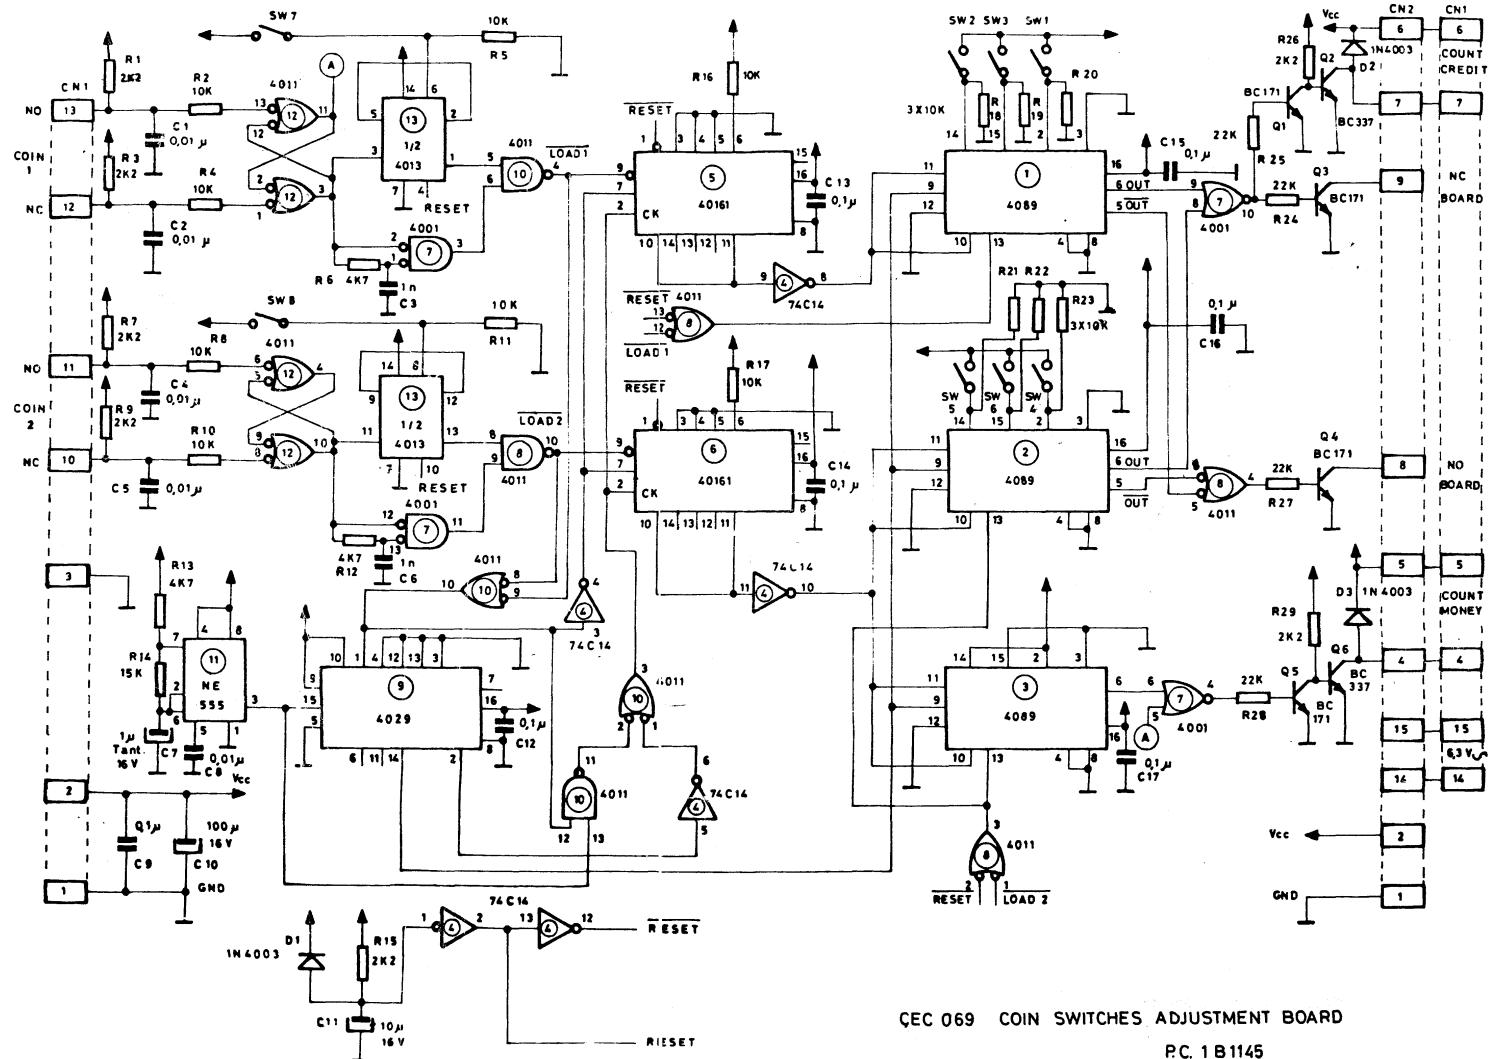


CEC 069 COIN SWITCHES ADJUSTMENT BOARD
PC. 1 B1145

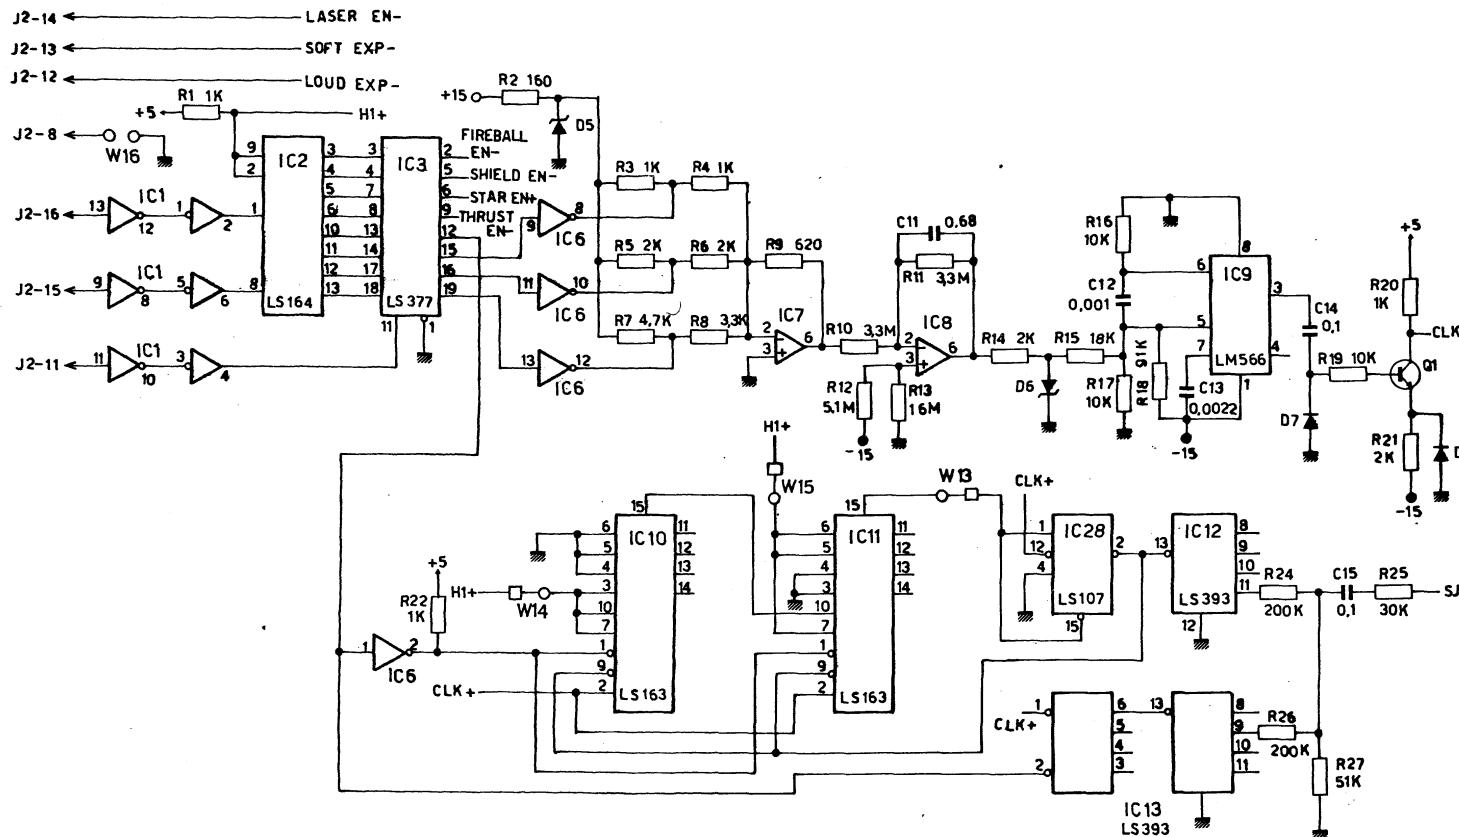


IC1 = 7414


IC6 = 7408

IC7-8 = TL081

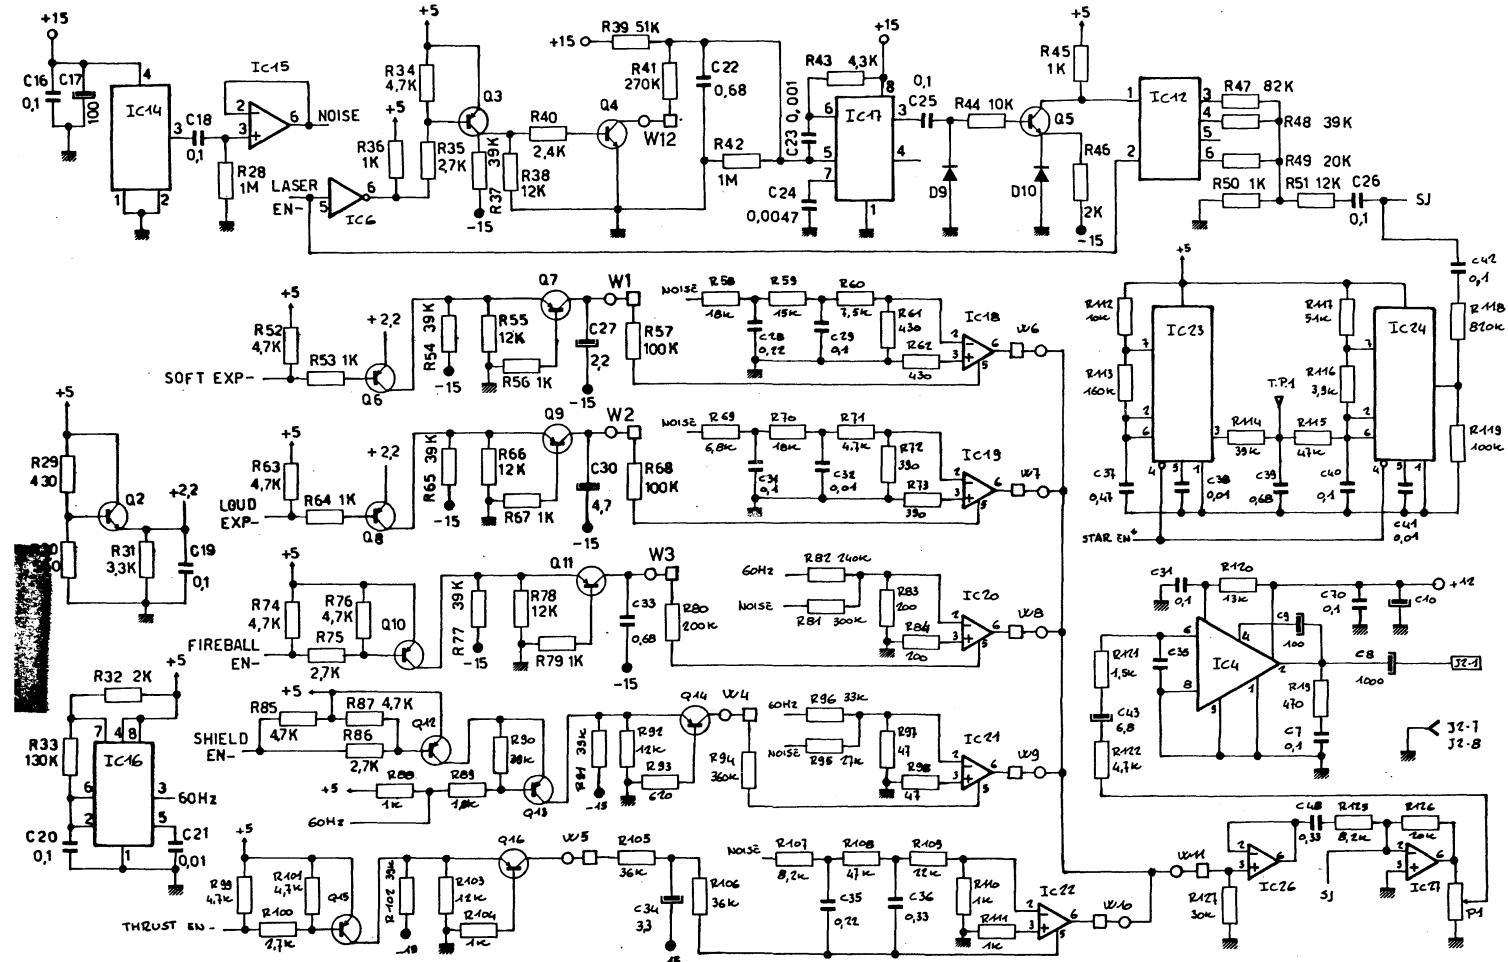

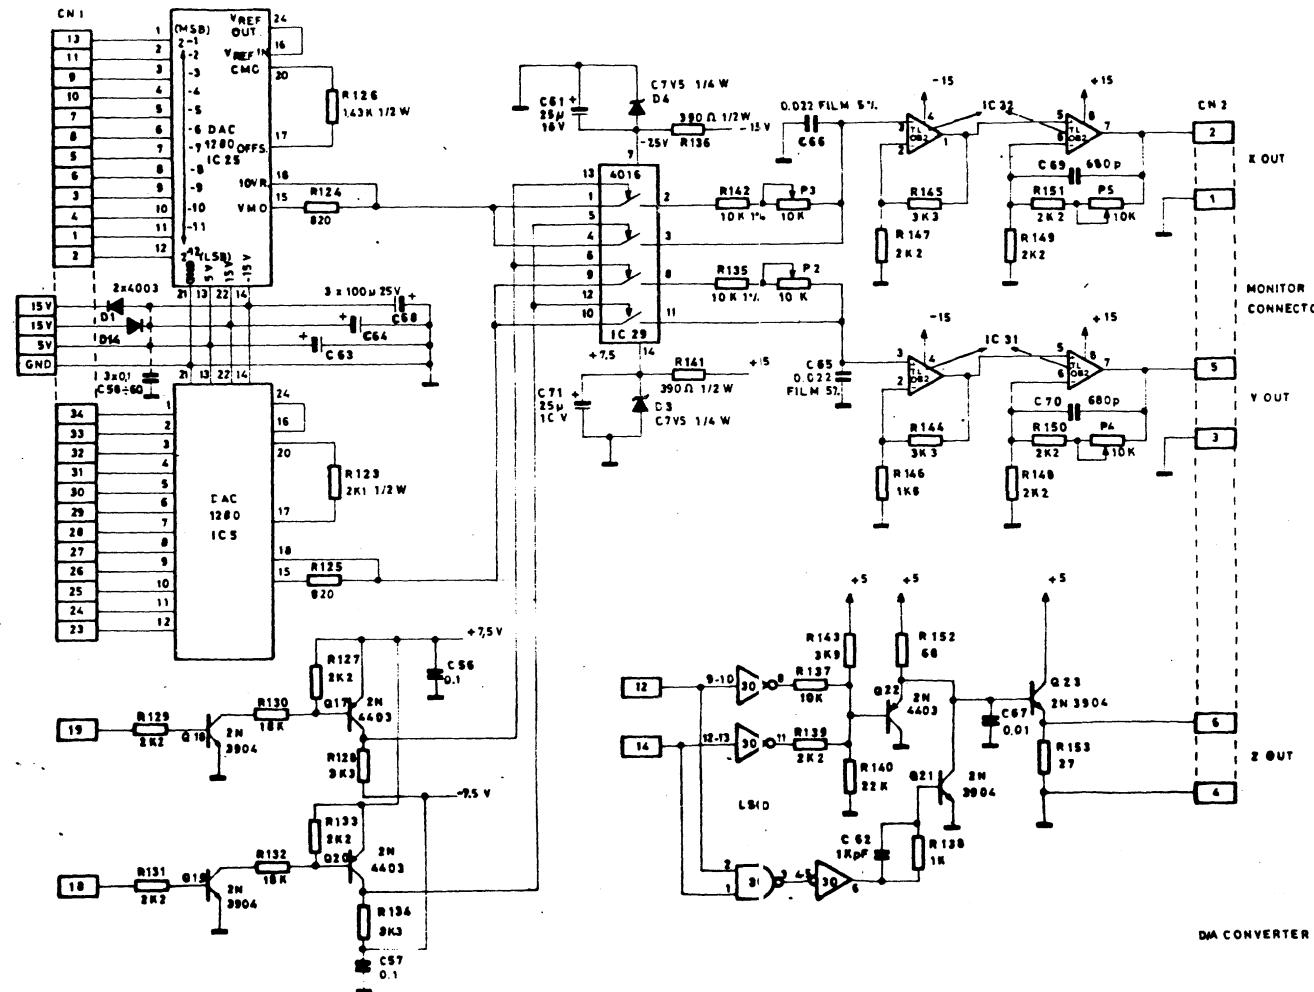

MONITOR X - Y

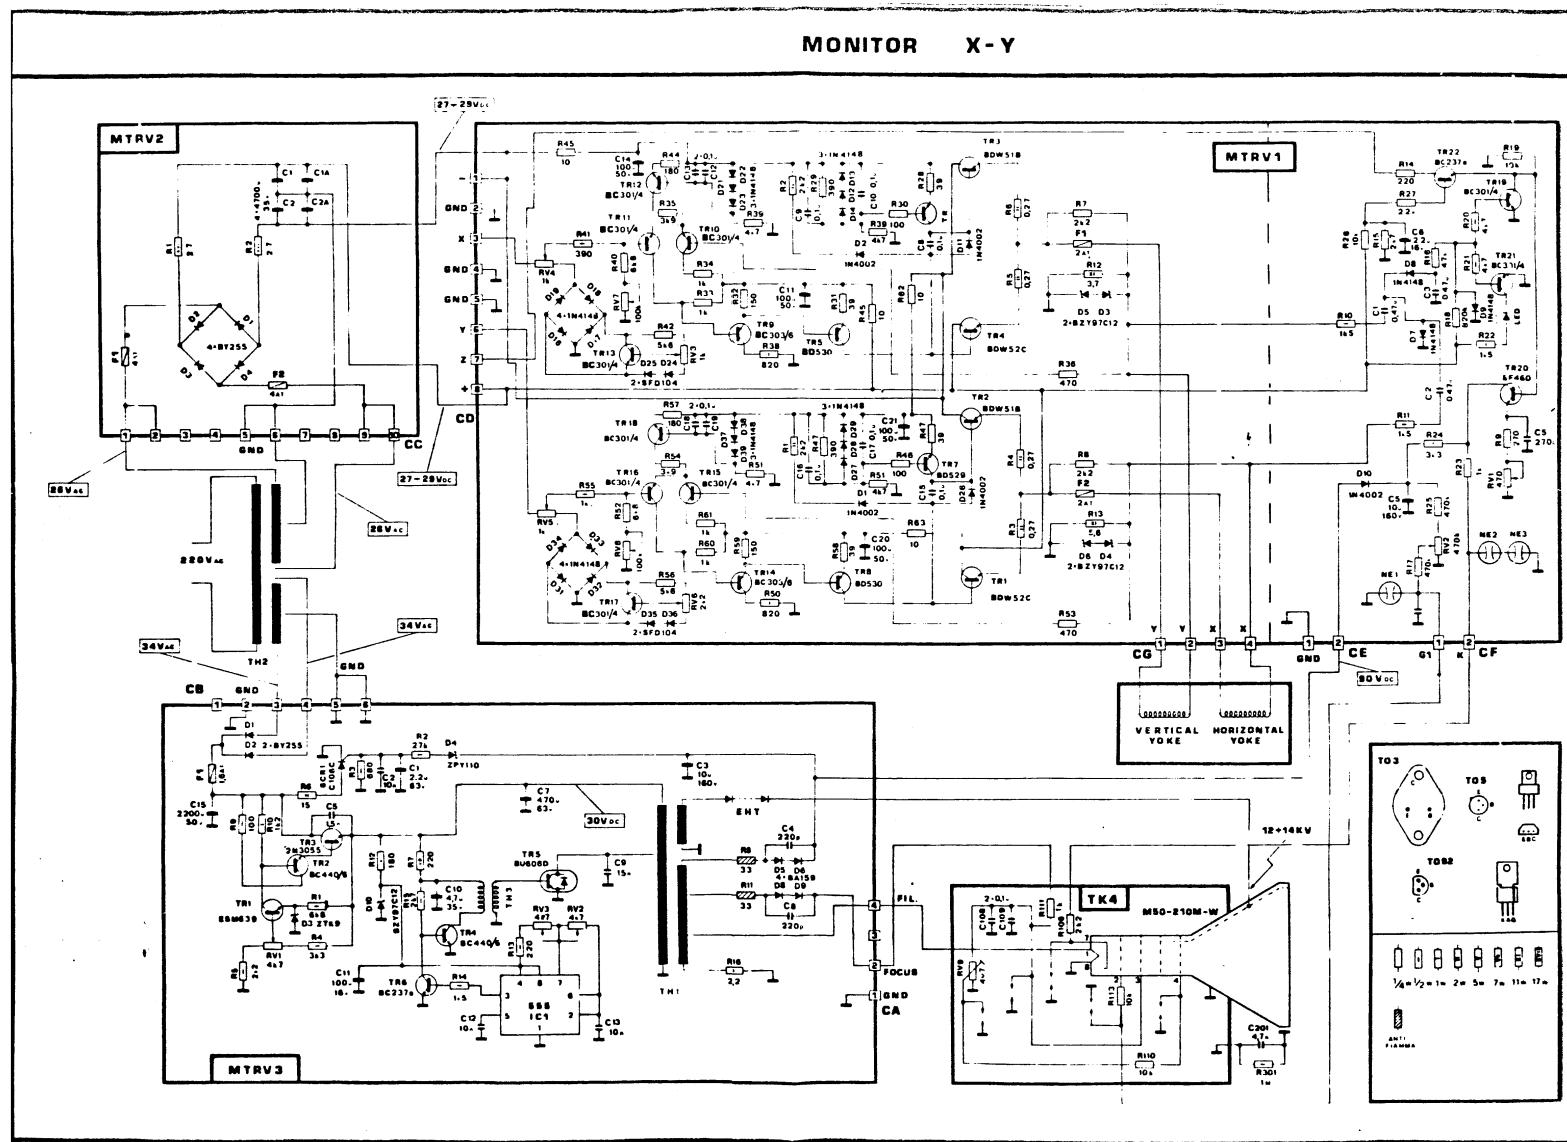

ADJUSTING TRIMMERS

